



Hello!

We hope you absolutely love your new speaker. This Vale Wifi Speaker works with the Amazon Alexa technology.

Amazon Alexa is built in the cloud, so it is always getting smarter. The more you use Alexa, the more it adapts to your speech patterns, vocabulary, and preferences with new features continually being added. Ask Alexa to answer questions, play music, hear the news, get weather and traffic reports, control your smart home, and more.



Warnings

Please read the warning and instructions before initial use of the speaker.

- Upon initial use or after a prolonged storage period, fully charge it once. The unit's full performance is achieved only after 2 or 3 completed charge and discharge cycles.
- To reduce the risk of injury, close supervision is necessary when the product is used near children.
- Do not expose the device to moisture.
- Use of a power supply or charger not recommended or sold by device manufacturer may result in a risk of fire or injury to persons.
- Do not use the device in excess of its output rating.
- Overload outputs above rating may result in a risk of fire or injury.
- Do not use the device if damaged or modified.
- Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not disassemble the device. Take it to a qualified

service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury.

- Do not expose a device to fire or excessive temperature. Exposure to fire or temperatures above 212°F may cause explosion.
- Have services performed by a qualified repair person using only identical replacement parts.
- This will ensure that the safety of the product is maintained.
- Do not charge the device while using the device to charge another device. Do not charge the device for more than 4-6 hours and do not leave unattended. Switch off the device when not in use.

FCC Statement

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits

are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment general uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Tech Specifications:

- Tap to talk! Alexa from Amazon hands free function
- Product dimension: 83 x 146 mm;
- Bluetooth version: V4.1
- Speaker Driver Diameter: 52mm
- Rated output power: 5W
- Built in 3.7V/2200mAh lithium polymer battery
- Charging input: 5V/400mA; It takes 4 hours to charge the speaker from 0 to 100%
- Playback time at max volume: up to 3 hours

inside

How to use the Speaker:

Charge the speaker completely before initial use.

- Using the provided cables, connect the Micro-USB end into the speaker and the USB end into a computer or an AC wall adapter.
- The LED (located above the volume controls) will light up red when charging and will turn green when fully charged.
- It takes 2-3 hours to charge the speaker fully.

Button Functions: (play, rewind, etc.)

Alexa can only be activated when connected to a WiFi network

- 📶 Button is located on the bottom of the speaker
- 📶 Short press: Mode switch to Bluetooth® mode
- 📶 Short press: Mode switch to WiFi mode

When speaker is powered on, it will default to Wifi mode. Once WiFi network is established, the connection will be automatic upon powering on. A voice prompt will confirm a network connection has been made (within 15-20seconds).

Common Voice Commands:

- “Alexa, play relaxing music.”
- “Alexa, what’s the weather like?”
- “Alexa, what’s in the news?”
- “Alexa, add milk to my shopping list.”
- “Alexa, set an alarm for 6 AM.”
- “Alexa, what am I doing on Wednesday?”
- “Alexa, what were yesterday’s NBA scores?”
- “Alexa, what’s on at the movies?”
- “Alexa, what time is it in New York?”

- ▶ Short press: Play or Pause
- ⏻ Long press: Power ON/OFF
- ▶ Short press: Answer or End call (Bluetooth® Mode)
- 📞 Short press: Activate Amazon Alexa (WiFi Mode)
- + Short press: Next Track
- + Long press: Volume +
- ⏮ Short press: Previous Track
- Long press: Volume –

WiFi Connection

Download the APP to create the WiFi connection.

- Download and connect to the MusicMecca app. You'll need the app to connect to the WiFi network
 - Using this allows you to create a seamless hub for all your audio APPs (Spotify® and Amazon Music®).
 - To use the Amazon Alexa talk feature, you'll use the Microphone button 📞, and say your command.
1. Power on the speaker.
 2. Open app from mobile device.

3. Select “----” and follow the prompts within the app.
* Entering the Wifi information will be necessary to complete the setup wizard.
 4. Press and hold the 📶 (on the bottom of speaker) to pair with preferred WiFi network. The LED Indicator will flash green. Release button when voice prompt sounds.
- ** TROUBLE CONNECTING?
Contact your network service provider.

Bluetooth® Connection

You have to manually enter Bluetooth® mode

- Press and hold the 📶 button to enter Bluetooth® pairing mode.
- The Mode LED will flash blue when in pairing mode.
- Select “Vale” from your smart phone’s list of possible pairs to connect via Bluetooth®.
- Once connected, play audio as desired.



Download the App!

This app is supported by Android and iOS devices. The app will allow you to control the speaker.



For iOS



For Android

back side